


SONO Eclipse is a premium ceramin-based composite. Installation and handling may vary from other products you may have installed. Please carefully read the points below; and if you have any questions, consult our installation manual, contact your specialty floor covering retailers, or call our support line at 888.255.3412.

GENERAL INFORMATION

- For indoor use only.
- Inspect cartons for visible damage. Cartons must always be placed flat. DO NOT stand carton on its end.
- Inspect all planks prior to installation for visible defects.
- Ensure that sub floor is structurally sound and clean.
- Sub floor variations should not exceed 1/4" inch in 10 feet.
- Concrete moisture content should not exceed 8.0 lbs/1000 ft² per 24 hours ASTM F1869. Failure to do so can result in mold conditions underneath the vapor barrier.
- SONO should not be installed in areas where temperature extremes will be below -40 degrees Fahrenheit or greater than 150 degrees Fahrenheit (-10° C to 65° C).
- Acclimation is not required if the product and installation area are between 60 to 100 degrees Fahrenheit (15° C to 38° C).
- Installation should be completed in conditions above 60 degrees Fahrenheit (15° C).
- Maximum distance in either direction is 100 feet without transitions.
- Use an expansion space of 1/4" (less that 50 lineal feet), 3/8" (upto 100 lineal feet).
- **NEVER USE TAPPING TOOLS ON SONO.**
- Always mix 3 to 4 cartons for best overall color placement.
- SONO is a fold down/drop lock installation method. For best results when engaging the short end lock, press down on the lock from the inside seam (nearest the previous row) to the outside.

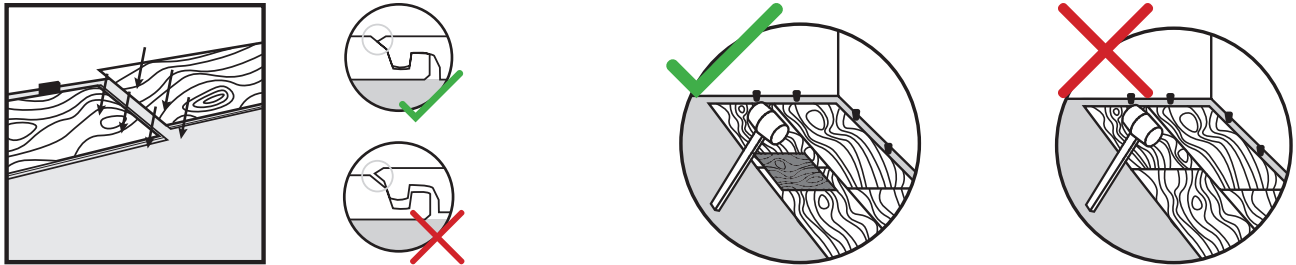

- Minimum board stagger is 16 inches from adjacent end joints.
- If required, when uninstalling SONO planks make sure to slide the planks apart. Strong vertical movement will break the retention clip and result in plank damage.



- When installing under door jambs or other locations that prevent angling for insertion. You will need to trim the vertical member of the groove and then use a premium adhesive to hold plank.
- Detailed installation manual, and glue down installation manual are available at www.inhausurfaces.com.